

# ELDORI+

---

## USER MANUAL

# 純粹に、愛を楽しく。

株式会社ソヒミジャパンによって設計・開発されました。  
SOHIMI JAPANは株式会社ソヒミジャパンの登録商標です。  
製造元・販売元：株式会社ソヒミジャパン

# 目次


---

日本語解説 .....	1
Guidance in English .....	14
前書き .....	1
目次 .....	2
各部の名称 .....	3
使い方 .....	4
アプリについて .....	5
充電の仕方 .....	6
お手入れと保管 .....	7
故障かなと思ったら .....	8
警告 .....	9
ご注意 .....	10
製品仕様 .....	11
破棄 .....	12
製品保証 .....	12
保証アクティブ .....	13
お問い合わせ .....	13



## 各部の名称

---

本体

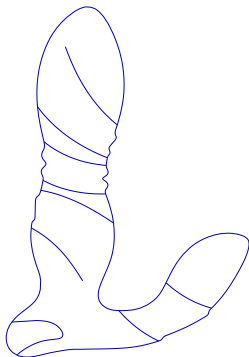


USBケーブル

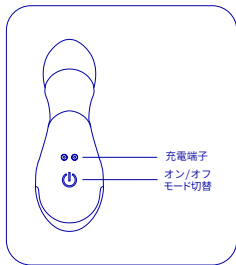

※ ACアダプタは付属しておりません。

## 使い方

---

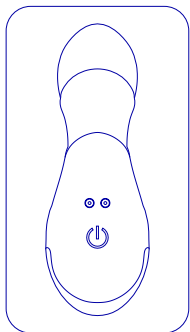

- ・ **⏻** ボタンを2～3秒長押しすると電源がONになります。
- ・ 電源が入ると本体が暫らく振動してから待機状態に入ります。
- ・ 電源が入っている状態で、**⏻** を短押しして振動・伸縮パターンを切り替えます。
- ・ 使用後は **⏻** ボタンを再度長押しで電源をOFFにして保管してください。

- ⚠ 水ベースの潤滑剤のみご使用ください。シリコンベースの潤滑剤と一緒に使用しないでください。
- ⚠ マッサージオイルや、ベビーオイルなど、油性のものと一緒に使用しないでください。
- ⚠ 本製品は生活防水ですが、強い水流をかけたり、長時間沈めたり(水深50cm以上)すると故障する恐れがあります。

# アプリについて

1




SOHIMI JAPAN

<https://app.sohimijapan.co.jp>

上記のQRコードをスキャンして専用アプリのSOHIMI JAPANをダウンロードしてください。

※ アプリの利用料は無料ですが、ダウンロードやご利用時にかかるパケット通信料はお客さまのご負担となります。

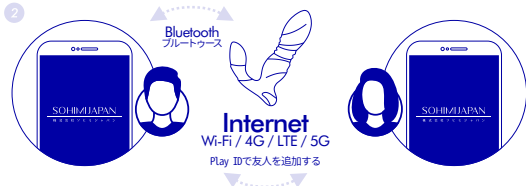


詳しくは、<https://app.sohimijapan.co.jp>をご覧ください。

※ 本製品の対応アプリは SOHIMI JAPAN です。SOHIMI JAPAN は、株式会社ソヒミジャパンにより開発・提供されました。  
※ Apple、Appleロゴは、米国およびその他の国で登録された Apple Inc. の商標です。App StoreはApple Inc.のサービスマークです。  
※ Google Play は Google LLC の商標です。


## 充電について

- 本体の充電端子に、付属のUSBケーブルを接続します。
- USBケーブルのUSBコネクタを、お手持ちのパソコンまたはACアダプタに接続します。
- 正しく充電できている状態では、本体の指示ランプが点滅します。
- 充電が完了すると、指示ランプが点灯します。

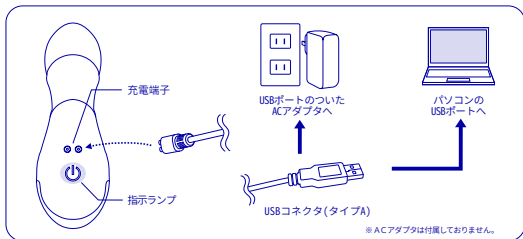

- △ 接続前に、ご使用のACアダプタ、またはパソコンのUSB規格が本製品の規格と合っているかご確認ください。
- △ はじめてご使用になるときや、長期間ご使用にならなかったときは、必ず充電してからお使いください。
- △ 電池の劣化を防ぐために、半年に一度は満充電にしてください。
- △ 付属の専用USBケーブル以外は使用しないでください。
- △ 専用USBケーブルは防水仕様ではありません。専用USBケーブルを濡らさないように、ご注意ください。
- △ 専用USBケーブルを濡れた手で接続しないでください。感電ややけどの恐れがあります。

## お手入れと保管について



- お手入れの前に必ず本体から専用USBケーブルを外してください。
- 湿らせてよく絞った柔らかい布で本体を拭いてください。
- 初めてご使用になる前によく洗浄し、ご使用後は水、またはぬるま湯で毎回洗浄してください。



- ・水、またはぬるま湯で洗浄してください。
- ・汚れが気になる場合は、石鹸や中性洗剤をご使用ください。
- ・洗浄後は、柔らかい布で水気を拭ってください。
- ・熱湯での洗浄はしないでください。
- ・本体をつけ置き洗いや、煮沸をしないでください。
- ・シンナー、ベンジン、アルコール等の溶剤は使用しないでください。変形、変色の原因になります。

⚠ 充電中は絶対に水の中に入れないでください。感電やショート、火災の原因になることがあります。

⚠ 直射日光のあたる場所や、高温になる場所を避けて保管してください。故障、発熱、発火の原因になる恐れがあります。



## 故障かなと思ったら

---

### ② 作動しない/充電してもすぐに止まる/振動・伸縮が弱い

- ・ボタンを2～3秒長押ししていますか。
- ・充電不足ではありませんか。
- ・完全に動かなくなるまで動作させてから、満充電してください。  
これを数回繰り返すと改善する場合があります。  
それでも改善されない場合は、電池の寿命の場合があります。

### ② 充電できない（充電ランプが点滅しない）

- ・専用USBケーブルや電源アダプタが抜けていませんか。
- ・パソコンがスタンバイモードになっている場合、パソコンのUSBポートを使用しても充電できません。
- ・目に見えない汚れが充電端子に付着しているかもしれません。充電端子を乾いた布や綿棒で拭くと改善する場合があります。
- ・満充電になっていませんか。充電ランプが点灯します。

### ② 充電が完了しない（充電ランプが点灯しない）

- ・充電端子に汚れが付着していませんか。
- ・120分以上充電してもランプが点灯しない場合は、接触不良によって充電ができない場合があります。

## 警告

---

- ・医用電子機器を使用中の人や、妊娠中の人、その他の疾患で治療を受けている人は医師に相談のうえ使用してください。
- ・使用中、身体に異常を感じたときは直ちに使用を中止し、医師に相談してください。事故や体調不良を起こす恐れがあります。
- ・故障が見つかったり、異常な動作を感じたら、すぐに使用を止め、電源を切ってください。事故やケガをする恐れがあります。
- ・幼児の手の届く所には置かないでください。付属品や取り外しのできる部品などの誤飲による事故やトラブルの恐れがあります。
- ・本体を充電する際には、正しい方法でUSBケーブル、電源アダプタを接続してください。
- ・濡れた手でUSBケーブル、電源アダプタの抜き差しをしないでください。感電ややけどの恐れがあります。
- ・本体の電源をONにしたまま、充電しないでください。故障、発熱、発火の原因になる恐れがあります。
- ・お手入れの際は、USBケーブル、電源アダプタを電源から抜いてください。
- ・電源アダプタを抜くときはUSBケーブルを持たずに、接続部に無理な力をかけないよう必ず電源アダプタを持って引き抜いてください。感電やショート、火災の原因になることがあります。
- ・充電時以外はUSBケーブル、電源アダプタを電源から抜いてください。埃や湿気で絶縁不良になり、漏電火災の原因になる恐れがあります。
- ・USBケーブル、電源アダプタにほこりが付着しないように定期的に掃除してください。ほこりの付着により絶縁不良になり、火災の恐れがあります。
- ・使用後はスイッチをOFFにしてください。事故やケガをする恐れがあります。

## ご注意

---

- ・落としたり、踏みつけたり、強い衝撃を与えないでください。感電やショート、故障の原因になります。
  - ・傷がある、腫れている、炎症を起こしている、発疹がある部分には使用しないでください。
  - ・本体の故障が見つかったり、異常な動作を感じたら、すぐに使用を止め、電源を切ってください。事故やケガをする恐れがあります。
  - ・疲労が激しいときや、酒に酔っているときなどは、体調不良を起こす恐れがありますので、使用しないでください。
  - ・火の中に入れたり、加熱、高温での充電・使用・放置しないでください。発熱、発火、破裂の原因になります。
  - ・シリコンカバーや本体外装を取り外さないでください。故障や発火、異常動作の原因となります。
  - ・専用USBケーブルを無理に曲げたり、引っ張ったり、本体に巻きつけたりしないでください。ケーブルが損傷する原因になります。
  - ・USBケーブル、電源アダプタが損傷しているときは使用しないでください。そのまま使い続けると感電やショート、火災の原因になる恐れがあります。
  - ・本体を長時間水中に放置しないでください。故障する恐れがあります。
  - ・性感染症を防ぐため、本体を不特定多数の人と共有しないでください。
  - ・連続して15分以上同じ箇所に使用しないでください。
  - ・本体、専用ケーブルには強力な磁石が入っております。携帯電話、時計、磁気カード、音楽プレイヤーなど、磁気の影響を受けるものには近づけないでください。故障や、記憶内容が破壊される恐れがあります。
- ※磁気により故障や破損等が発生した場合、弊社は一切責任を負いかねます。あらかじめご了承ください。

## 製品仕様

品名	ELDORI+
外形寸法 / 質量	150 × 106 × 35mm / 約240g
稼働時間	約60分（最高出力時）
充電時間	約120分
入力定格	AC 100-240V 50/60Hz
出力定格	DC 5V /1A
USBケーブル長さ	81cm
材質	ABS、TPE、リチウムイオン電池(Li-ion)
電源方式	充電式
生産国	中国

## 破棄

---

本製品は内部電池にリチウムイオン電池を使用しています。リチウムイオン電池はリサイクル可能な資源です。

製品を破棄する際は、リチウムイオン電池を取り出し、各自治体の処理方法に従いリサイクルにご協力ください。



®219-249049



Bluetooth®



※ Bluetooth® のワードマークおよびロゴは、Bluetooth SIG, Inc. の登録商標であり、Shenzhen Envision Technology Innovation Co.,Ltd. による使用はライセンスに基づいています。他の商標および商号は、それぞれの所有者に帰属します。

## 製品保証

---

製品の保証期間は、ご購入日から1年間です。

ご購入日より1週間以内にご登録ください。

保証期間内であっても次の場合には保証対象外になります。

- ・本書の提示がない場合、および保証アクティブにしない場合。
- ・使用上の誤りおよび不当な修理や改造による故障および損傷。
- ・お買い上げ後の輸送、移動、落下などによる故障および損傷。
- ・火災、地震、水害、落雷、その他の天変地異や公害、異常電圧による故障、および損傷。
- ・消耗または摩耗した部品の交換など。

## 保証アクティブ

当製品の保証を有効にするため、  
下記のQRコードをスキャンして当該ページにアクセスしてください。

**[www.sohimijapan.co.jp/pages/warranty](http://www.sohimijapan.co.jp/pages/warranty)**



## お問い合わせ

お問い合わせ：  **[support@sohimijapan.co.jp](mailto:support@sohimijapan.co.jp)**

**[www.sohimijapan.co.jp](http://www.sohimijapan.co.jp)**

純粹に、愛を楽しく。

Designed and developed by SOHIMI JAPAN, K.K.  
SOHIMI JAPAN is a registered trademark of SOHIMI JAPAN, K.K.

# Table of Contents

---


日本語解説 .....	1
Guidance in English .....	14
Foreword .....	14
Table of Contents .....	15
Product Contents .....	16
Operating Guide .....	17
Application .....	18
Charging .....	19
Cleaning & Storage .....	20
Troubleshooting .....	21
Safety and Warning .....	22
Specifications .....	24
Disposal .....	25
Warranty .....	25
Warranty Activation .....	26
Contact Us .....	26





## Product Contents

---

### Product

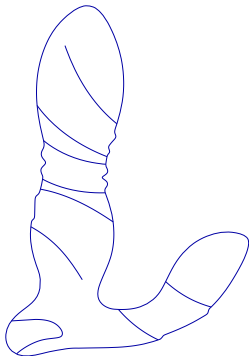


### USB Charging Cable

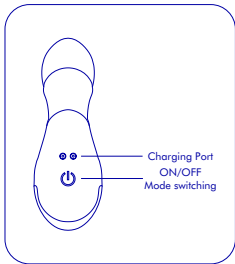





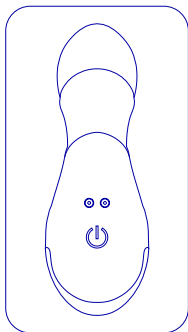

※AC Adapter is not supplied.

## Operating Guide

---



- Press & Hold  Button for 2~3 seconds to turn ON.
- When the power is turned on, product will enter standby mode after a short vibration.
- Press  Button once to switch the Vibration & Thrusting modes when the power is turned on.
- To turn OFF the product, Press & Hold  Button again for 2~3 seconds.

-  ALWAYS use water-based lubricant.
-  Silicone -based / oil-based lubricants / other oils such as massage oil or baby oil may cause damage to the product material.
-  The product is waterproof up to 50cm. DO NOT place in deeper waters or expose to intense streams.

# Application


1



<https://app.sohimijapan.co.jp>

Please scan this QR code to download the SOHIMI JAPAN app on your smartphone.

※ The application is free to use, but data communication charges incurred during download or use are the responsibility of the customer.

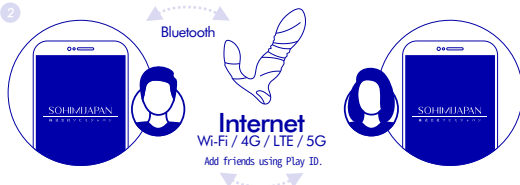


For more details, please visit <https://app.sohimijapan.co.jp>

- ※ The supported application for this product is SOHIMI JAPAN . SOHIMI JAPAN is developed and provided by SOHIMI JAPAN, K.K.
- ※ Apple, the Apple logo are registered trademarks of Apple Inc. App Store is service marks of Apple Inc., registered in the U.S. and other countries and regions.
- ※ Google Play is a trademark of Google LLC.

## Charging


- Connect the USB charging cable and the charging port of the product.
- Plug the USB plug of the charging cable into any USB port or USB/AC power adapter.
- When the product charger is placed correctly and connected to a power source the indicator light will blink every few seconds.
- When charging is complete, the indicator light will always be on.

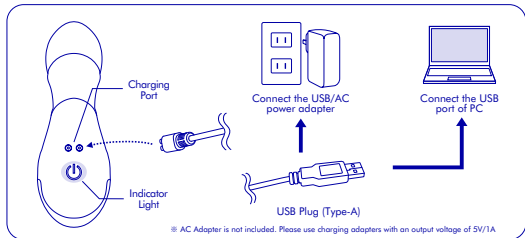

- ⚠ Please make sure that the adapter or computer USB port matches the product before connecting.
- ⚠ Please charge it fully before using it for the first time, or after a long time without using it.
- ⚠ To maintain the quality of the battery, please fully charge it at least once every six months.
- ⚠ Do not use a charging cable other than the dedicated USB cable provided.
- ⚠ The supplied USB charging cable is not waterproof. Please take care not to get it wet or submerge it in water.
- ⚠ To avoid electrical shock or burns and other accidents, please make sure your hands are dry before charging the product.

## Cleaning & Storage

---

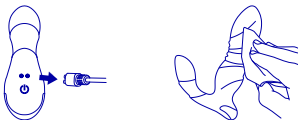

- Please unplug the USB charging cable before cleaning.
- Please dry it with soft fabric after cleaning.
- Please clean it carefully with water before/after each use.



- Please clean it with cold or lukewarm water.
- Please clean it with mild soap or neutral detergent.
- Please dry it with soft fabric after cleaning.
- Do not wash it with hot water.
- Do not boil it.
- Do not clean it with banana oil, benzene, alcohol and other solvents which may cause product deformation and discoloration.

- ⚠ It is strictly forbidden to immerse the product in water when charging to avoid accidents such as electric shock, short circuit and fire.
- ⚠ Please avoid storing this product in places exposed to sunlight or in high temperatures or high humidity. This may cause discoloration, breakdown, heating or even a fire.

## Troubleshooting

---

### ? The product does not work properly / Vibration & Thrusting is weak

- Did you hold the power button for 2~3 seconds after pressing it?
- Is it fully charged?
- Please release the power until the product does not turn on and then fully charge it. If it still doesn't work after several attempts, the battery might be damaged.

### ? The product can not be charged. ( The Indicator Light does not blink )

- Is the charging cable disconnected from the adapter or charging port?
- When using PC USB port, the product will not charge if your computer goes into standby mode. Please check if your PC is in standby mode.
- Dust and stains might be on the connector. Please wipe it with a dry fabric or cotton swab before you try to recharge it.
- Is the product already fully charged? When fully charged, the indicator light will become solid instead of blinking.

### ? The charging will not be completed. ( The Indicator Light does not light up )

- Dust and stains might be on the connector. Please wipe it with a dry fabric or cotton swab before trying to recharge it.
- If the indicator light is still blinking after 120 minutes of charging, it might be caused by a charging fault due to poor contact.

## Safety & Warning

---

- If you are using a medical device / undergoing other treatment / pregnant, please consult your doctor before using.
- Stop using and consult a doctor or pharmacist if you experience any discomfort while using.
- When you notice that the product is working abnormally, please immediately stop using and turn off the power to avoid injuries and accidents.
- Please keep it out of the reach of minors to prevent them from swallowing product parts or accessories by mistake.
- Please use the supplied USB charging cable when charging and connect it correctly, or it may cause overheating or burning.
- To avoid electric shock and burns, please keep your hands dry when you (un)plug the charging cable.
- Please turn it off before charging, otherwise it may cause malfunction, heating, and burning.
- Please turn it off and cut off the power before cleaning.
- When disconnecting the supplied USB, please hold the connector part and do not stretch the cable, as this may accelerate the cable's aging and cause electric shock, short circuit, or even fire.
- Please unplug the included USB charging cable when there is no need to charge, otherwise it may cause short circuit due to dust and moisture which may lead to electric leakage and fire accidents.
- Please clean the USB charging cable connector regularly to avoid short circuit and fire accident due to dust accumulation.
- Please turn it off after use.

## Safety & Warning

---

- Please do not push strongly against it or step on it.
  - DO NOT use on swollen or inflamed areas of skin, and do not apply to the neck area.
  - Discontinue use if you feel uncomfortable.
  - DO NOT use when you are extremely tired or drunk to avoid causing other discomfort.
  - DO NOT charge, use, or store in extreme temperatures, as this may cause burns or breakage.
  - DO NOT forcefully pull or remove the silicone on the surface of the product to avoid product damage.
  - DO NOT over-bend or pull the supplied USB charging cable and do not wrap the charging cable around the product for storage as this may cause damage to the charging cable.
  - DO NOT use the supplied USB charging cable when it is damaged, as it may cause electric shock, short circuit, and fire.
  - DO NOT immerse in water for a long time.
  - DO NOT share this product with multiple people to avoid transmitting sexually transmitted diseases.
  - DO NOT continue to use more than 15 minutes on the same body part.
  - The product and the included USB charging cable contain strong magnets. Please do not get it close to mobile phones, watches, magnetic cards, MP3 players, etc. as it may cause product malfunction or damage.
- ※ Please note that any product malfunction or damage caused by magnetic force is not covered by the Return and Exchange Terms.



## Specifications

Product Name	ELDORI+
Size / Weight	150 × 106 × 35mm / Approx. 240g
Running Time	Approx. 60mins (Full Power)
Charging Time	Approx. 120mins
Input voltage	AC 100-240V 50/60Hz
Output voltage	DC 5V /1A
USB cable length	81cm
Materials	ABS / TPE / Lithium-ion battery
Power source	Rechargeable
Country of Manufacture	China

## Disposal

---

Regarding the disposal of Waste Electrical and Electronic Equipment (WEEE). The symbol below of a crossed-out dustbin indicates that this item should be taken to an appropriate collection point for proper disposal. Please do not dispose of household waste.



※ The Bluetooth® word mark and Logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Shenzhen Envision Technology Innovation Co.,Ltd. is under license. Other trademarks and trade names are those of their respective owners.

## Warranty

---

This product is covered by Product Warranty for 1 YEAR the from Original Date of Purchase against defects due to fault of production or materials.

The product Warranty covers working parts of the Product and does NOT cover the following items:

- The product warranty has not been activated.
- Unusual methods of use or methods of use deemed inappropriate or otherwise mentioned in this user manual as invalidating the warranty.
- Damage caused during delivery of the product, transportation of the product or accidents.
- Damage caused by natural disasters or use at incorrect voltage.
- Cosmetic damage caused by normal use of the product.

## Warranty Activation

TO ACTIVE 1 - YEAR WARRANTY,  
PLEASE SCAN THIS QR CODE OR VISIT:  
**[www.sohimijapan.co.jp/pages/warranty](http://www.sohimijapan.co.jp/pages/warranty)**



## CONTACT US

---

Contact Email:  **[support@sohimijapan.co.jp](mailto:support@sohimijapan.co.jp)**  
**[www.sohimijapan.co.jp](http://www.sohimijapan.co.jp)**